

**1** Plug in and turn on the laptop/PC and your LCD Projector.




**2** Connect the laptop/PC to your LCD projector using the VGA cable.

**3** Connect the LCD projector to the video conference equipment using the VGA to DVI Cable.




**4** Press **Presentation** to display your laptop/PC image to the far end site. Press it again to return to the Main Camera view.

**5** Press **Screen Layout** and select **Show selfview** from the layout control submenu to display the image of what you are sending to the far end site.

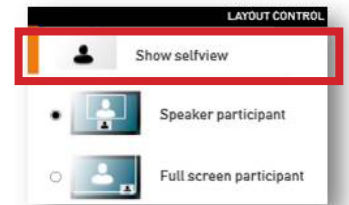

If your laptop does not display your presentation press on your keyboard and select **“Duplicate”**.

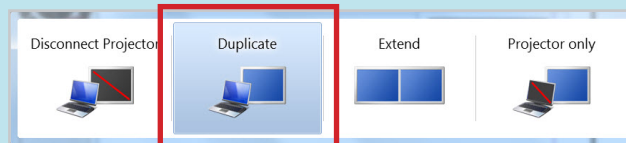

You may also need to change your resolution to 1024x768.