


- 1 Plug in and turn on the laptop/PC.

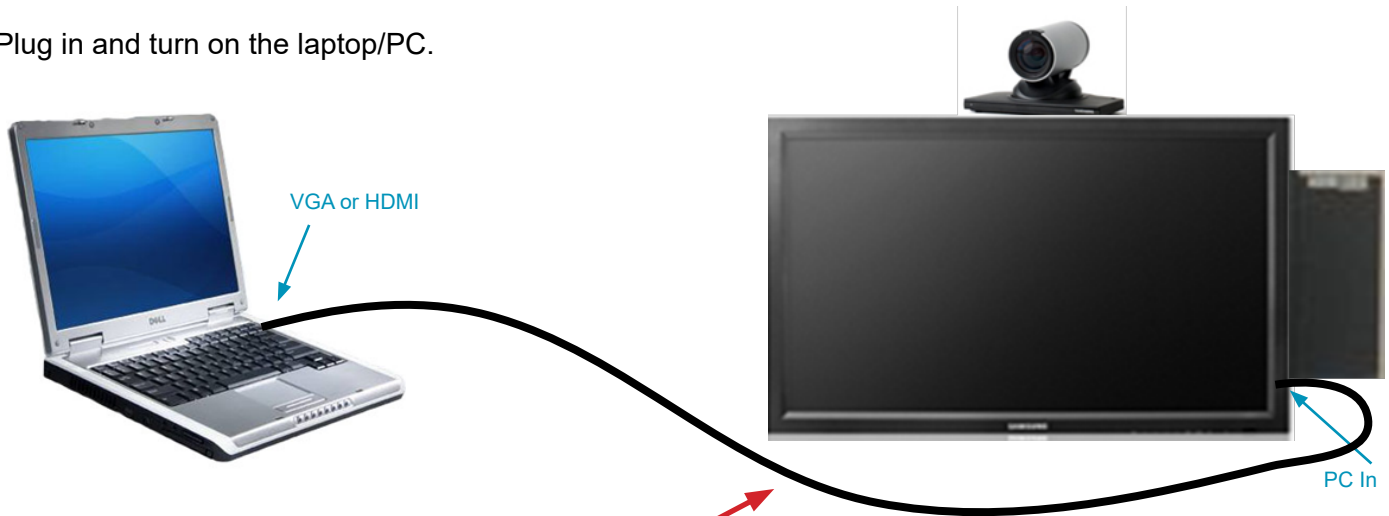


- 2 Connect the laptop/PC to your video conference equipment using the VGA or HDMI Cable.

- 3 Follow the steps below to share your presentation during a call or outside of a call (to share with others in the room when you're not on a call).

(TRC6: Press the **Back** button on the remote control to display the onscreen menu items.)

During a call

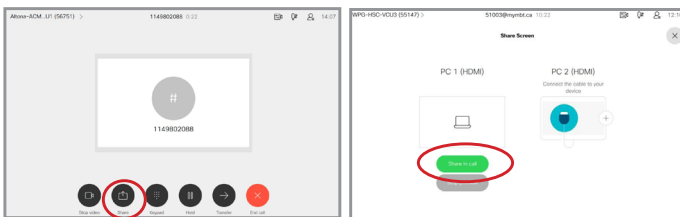

Select **Share** and then **Share in call**.

❗ DO NOT USE Keypad, Hold or Transfer.

Outside a call



Select **Share** on the home screen and then **Share** again.

Stop sharing



Select **Share** and then **Stop Sharing**.

If your laptop does not display your presentation press

 +  on your keyboard and select **"Duplicate"**.

You may also need to change your resolution to 1280x720.

